

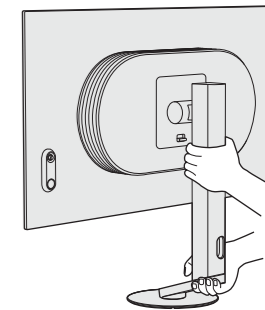
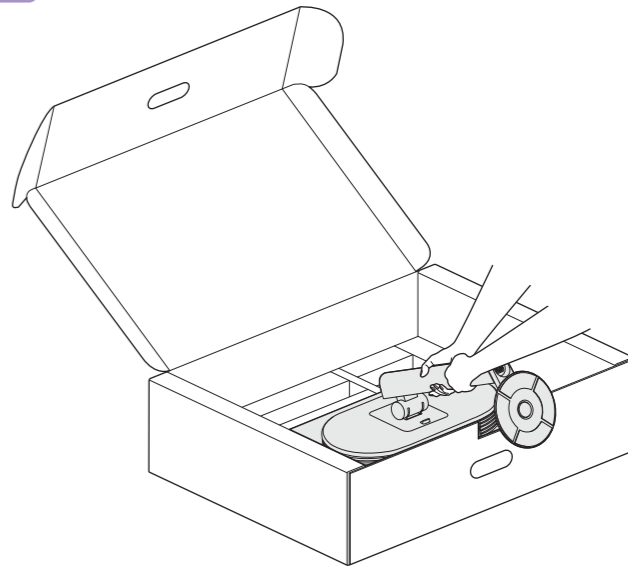
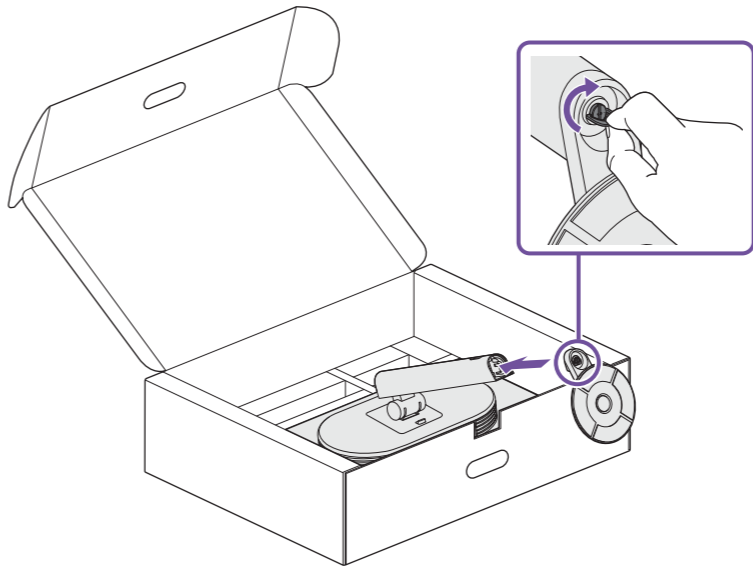
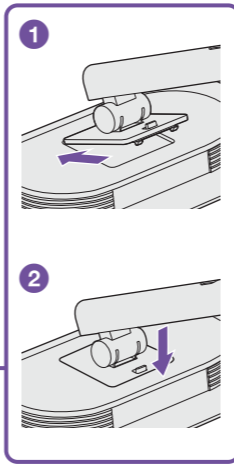
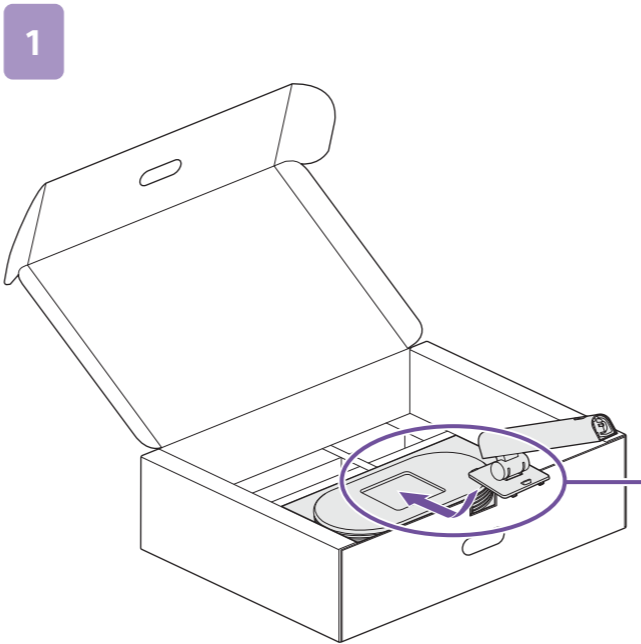
 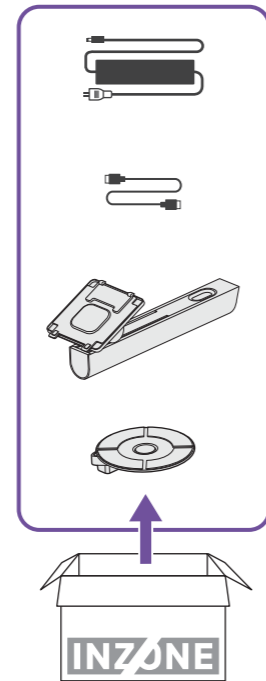
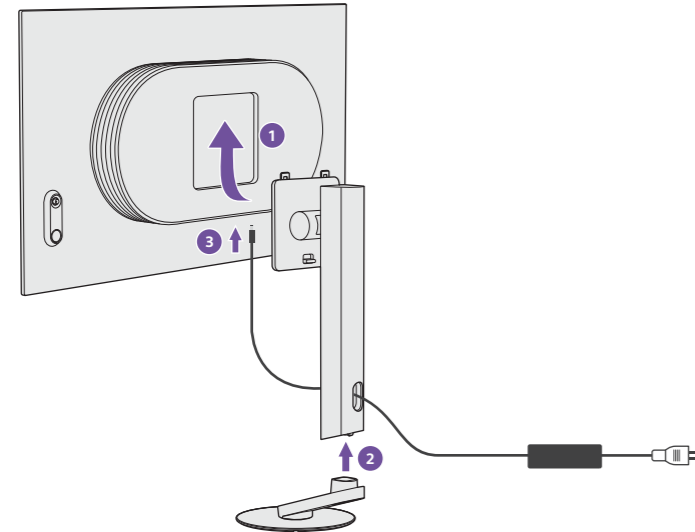
 
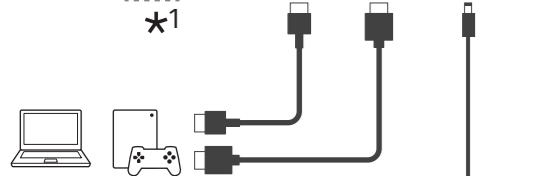


Setup Guide
Manuel de configuration
設定指南


Setup Guide / セットアップガイド / 安裝指南 / دليل الإعداد / Guía de configuración / Guide d'installation / Installatiehandleiding / Einrichtungshandbuch / Guia de configuração / Guida di installazione / Startguide / Installationsvejledning / Asetusopas / Innstillingsveiledning / Przewodnik ustawień / Průvodce nastavením / Sprievodca nastavením / Beállítási útmutató / Ghid de configurare / Ръководство за настройка / Οδηγός εγκατάστασης / Seadistusjuhend / Užsākšanas ceļvedis / Nustatymo vadovas / Priročnik za pripravo / Vodič za postavljanje / Vodič za podešavanje / מודריך הגדרה






3

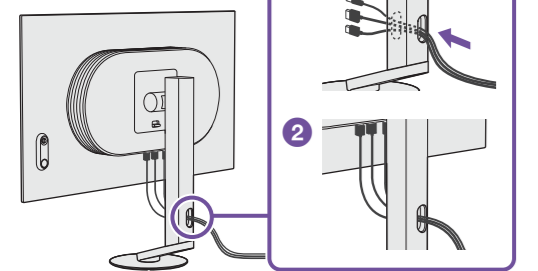

4

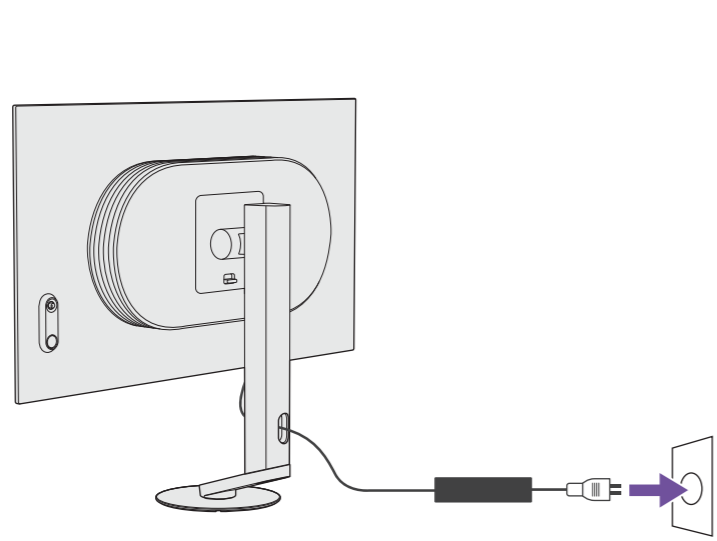

5

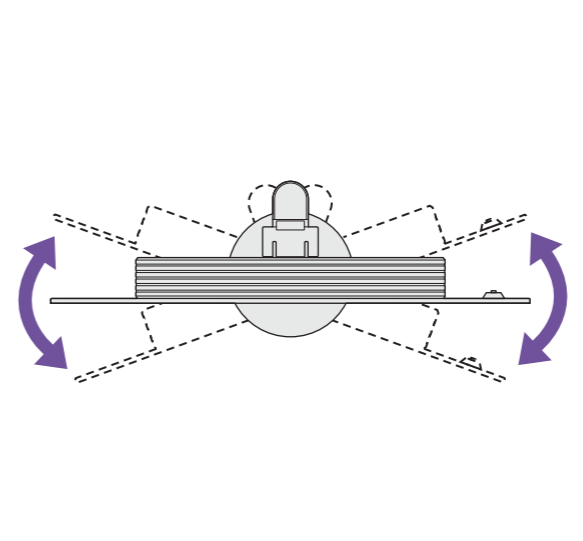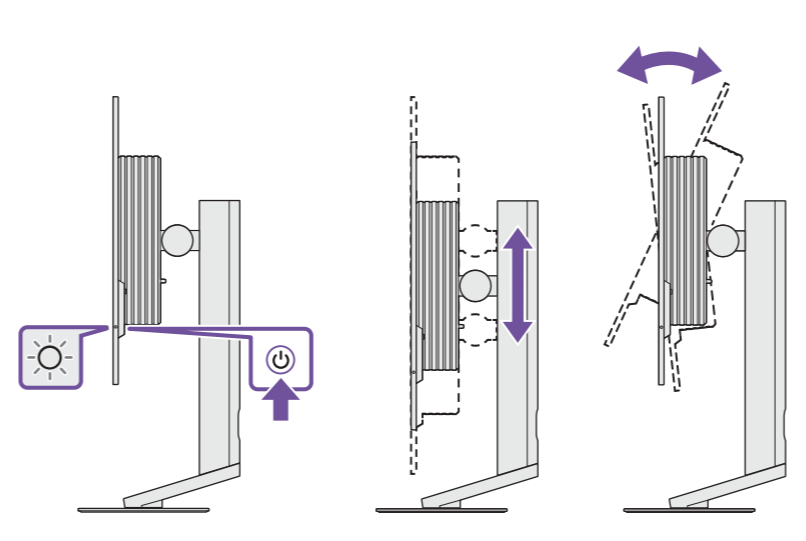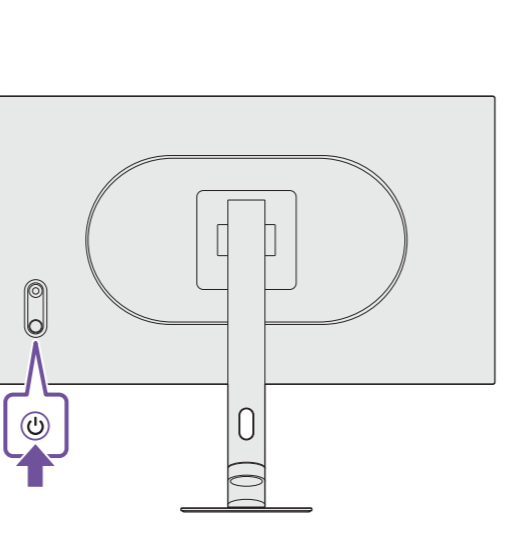

?

https://rd1.sony.net/help/tv/27q10s/h_zz/

出版日期：2024 年 7 月