



Preparation

The battery pack


- 1 Charge the battery pack until the CHARGE lamp lights off.
For customers in the U.S.A. and Canada

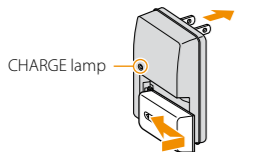

For customers in countries/regions other than the U.S.A. and Canada

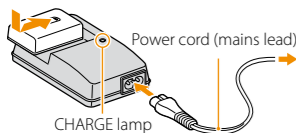


- 2 Insert the battery pack into the camera.

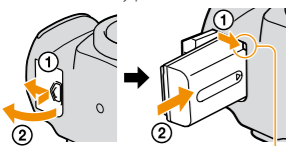

Firmly insert the battery pack all the way while pressing the lock lever with the tip of the battery.


The lens

- 1 Remove the body cap on the camera and packaging lid on the rear of the lens.

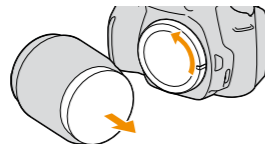

- Do not touch inside parts.
- If dust enters the camera, it may appear on the photo image. Do not leave the camera and lens without the caps. When you change the lens, do it quickly in a location free from dust.



- 2 Mount the lens by aligning the index marks as illustrated.

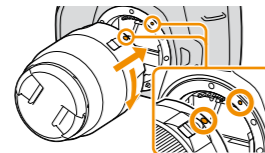

- Turn the lens until it clicks.
- Remove the lens cap during shooting.

The memory card

- 1 Open the memory card cover.
- 2 Insert a memory card and select the type of the memory card you want to use using the memory card switch. Face side (SD memory card)



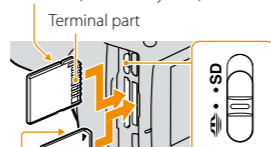
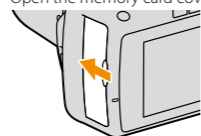


Terminal part
Face side ("Memory Stick PRO Duo")
Terminal part

- When inserting a memory card, turn the camera off.
- For available memory cards, refer to the Instruction Manual.


Date/time setup

 - 1 Turn the camera on.
- 2 Set up the date/time.

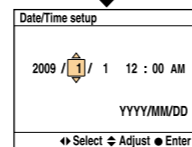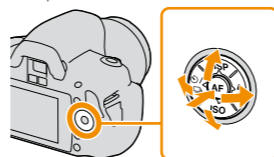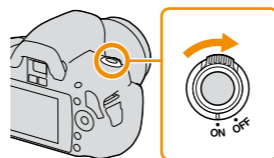


Shooting

- 1 Set the mode dial to AUTO.

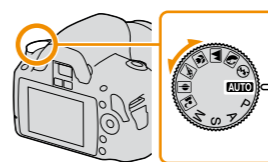

- 2 Look into the viewfinder.

- Adjust the diopter-adjustment dial if the focus of the viewfinder is not achieved.

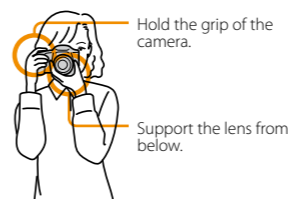


Hold the grip of the camera.


Support the lens from below.

- 3 Press the shutter button halfway down to focus.

- Pressing the shutter button halfway down and holding it activates the autofocus.

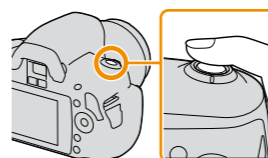


- 4 Press the shutter button fully down to shoot.

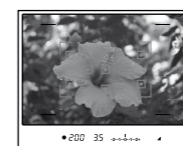

Playback

- Press .

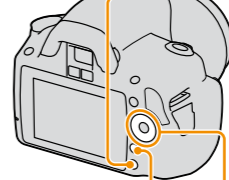

Press .



To play back a previous or next image: press on the control button.

To return to the shooting mode: .

To delete the image

Press .

To fully enjoy the features of your single lens reflex camera, consult the "Instruction Manual."

