SONY Quick Start Guide DSLR-A330/A380

 
α 330 α 380

Preparation


The battery pack

1 Charge the battery pack until the CHARGE lamp lights off.






 For customers in countries/regions other than the U.S.A. and Canada



 
2 Insert the battery pack into the camera.




Firmly insert the battery pack all the way while pressing the lock lever with the tip of the battery.



 1 Remove the body cap on the camera and packaging lid on the rear of the lens.



 - Do not touch inside parts. If dust enters the camera, it may appear on the photo image. Do not leave the camera and lens without the caps. When you change the lens. do it quickly in a location free from dust
- 2 Mount the lens by aligning the index marks as illustrated.



• Turn the lens until it clicks. Remove the lens cap during shootina.





 
2 Insert a memory card and select the type of the memory card you want to use using the memory card switch. Face side (SD memory card)

Terminal part



- When inserting a memory card, turn the camera off.
- For available memory cards, refer to the Instruction Manual.






Set date and time? OK Cancel



Shooting

set to "LIVE VIEW."

 
Set the mode dial to AUTO. Check that the LIVE VIEW/OVE switch is




Check the subject on the LCD monitor.



  - 3 Press the shutter button halfway down to focus.
- Pressing the shutter button halfway down and holding it activates the autofocus.
- 4 Press the shutter button fully down to shoot.








4-147-784-11 (1)









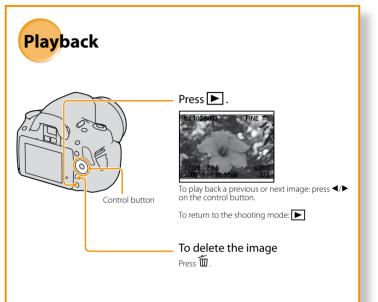

To fully enjoy the features of your single lens reflex camera, consult the "Instruction Manual."

© 2009 Sony Corporation Printed in Thailand

